

Parts List — UP5052

Part Number	Description	Config Step	Qty
250875	MANUAL, OPERATORS	Configuration Type	1
480770	BDL, DISTRIBUTION - ULTRAPRO II - 80 RUN - 10 ZONE - TRIPLE PRODUCT	Tank Size	1
412303	BDL, STRAP - C/W SIDE RELEASE BUCKLE - STAGE 2	Tank Size	160
412670	BDL, DELIVERY WING HOSE HOLDER - SHORT - STAGE 2	Tank Size	6
412671	BDL, DELIVERY WING HOSE HOLDER - MEDIUM - STAGE 2	Tank Size	12
412672	BDL, DELIVERY WING HOSE HOLDER - LONG - STAGE 2	Tank Size	2
410102	BDL, BAGLIFTER - UPII350/360 - 530 - BASE LEVEL - STAGE 1	Baglift	1
410104	CTN, HYD - EXT. KIT - BAGLIFT - UPII 530 BU - STAGE 2	Baglift	1
414005	BDL, ULTRAPRO II - 550 BU - 10 ZONE - WIDE M	Tank Configuration	1
270225	SCALE, DIGITAL - HANDHELD	Tank Configuration	1
451144-1	BDL, SEEDBDL, SEEDMASTER, REMOTE TANK MONITOR - STAGE 2	Tank Configuration	1
412140-3	ASSY, CANOLA ROLLER CARTRIDGE - UPII - 8 RUN - STAGE 2	Tank Configuration	10
412103-3	ASSY, STANDARD ROLLER CARTRIDGE - UPII - 8 RUN - W/ CLAMPS - STAGE 2	Tank Configuration	20